


GB AWM 6123

PROGRAMME CHART

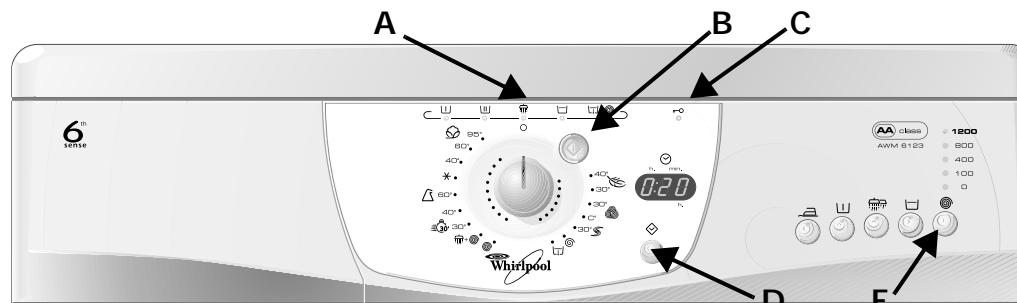

- A. Programme Sequence Indicator
- B. "Start/Pause" Button
- C. "Door Open" Indication
- D. "Start Delay" Button
- E. "Spin Speed Reduction" Button



Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

* : optional / Yes : dosing required

¹ For improved garment care spin speed is restricted to 800 rpm in this programme.

² For improved garment care spin speed is null in this programme.

Programme	Care Labels	Type of wash/Notes	Max Load Kg	Detergents and additives			Special options						Max Spin Speed rpm	Programme Selector
				Softener	Main Wash	Pre-wash	Start Delay	Easy Ironing	Prewash	Intensive Rinse	Rinse Hold	Spin Speed Reduction		
Cotton		Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>With heavily soiled laundry the additional "Prewash" option can be selected as well.</i>	5.5	*	Yes	*	*	*	*	*	*	*	1200	95°, 60°, 40°, *
Synthetics		Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	*	Yes	*	*	*	*	*	*	*	800 ¹	60°, 40°
Short		Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	3.0	*	Yes	—	*	*	—	*	*	*	1200	30°
Delicates		Curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	*	Yes	*	*	—	*	—	*	*	800 ¹	40°, 30°
Wool		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. <i>If you select "Rinse Hold" do not leave items to soak for too long.</i>	1.0	*	Yes	—	*	—	—	—	*	*	800 ¹	30°, C°
Silk		Textiles made of linen, silk, wool and viscose marked as "handwashable". <i>If you select "Rinse Hold" do not leave items to soak for too long. No spinning.</i>	1.0	*	Yes	—	*	—	—	—	*	—	0 ²	30°
Rinse + spin	—	<i>Same as the last rinse and the final spin in the "Cotton" programme.</i>	5.5	*	—	—	*	*	—	*	*	*	1200	
Spin	—	<i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>	5.5	—	—	—	*	*	—	*	—	*	1200	
Gentle spin	—	<i>In this programme spinning is gentle. Same as the spin cycle in the "Wool" programme.</i>	1.5	—	—	—	*	—	—	—	—	*	800 ¹	
Drain	—	<i>Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".</i>	—	—	—	—	—	—	—	—	—	—	—	

Whirlpool is a registered trademark of Whirlpool USA.

5019 301 10217

CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
Cotton	95	5.5	54**	1.90	2:00
Cotton	60	5.5	49	1.04	2:25
Cotton	40	5.0	44	0.60	2:05
Synthetics	60	2.5	55	0.80	1:30
Synthetics	40	2.5	55	0.60	1:20
Short	30	3.0	37	0.40	0:30
Delicates	40	1.5	60	0.60	0:45
Wool	30	1.0	60	0.30	0:40
Silk	30	1.0	45	0.30	0:40

Prewash cycle might increase programme duration. Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

* The remaining time indicator can similarly deviate from the values in the table, because it takes into account the household conditions applicable at that time.

** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergent as described in the programme table or in the chapter "Detergents and Additives" in the booklet.

1. Turn the **programme selector knob** to the desired programme and temperature.
2. The remaining time display shows the duration of the chosen programme (in hours and minutes) and after taking some seconds for calculating, the pilot lamp of the **"Start/Pause"** button is flashing.
3. The programme sequence and the predefined spin speed indication corresponding to the selected programme lights up.

SELECT ANY DESIRED OPTION

Selecting any option the indication lights up. When the combination of programme, additional options and temperature is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Easy Ironing" button

- Can be used together with Cotton, Synthetics and Daily programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very soft.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. The cycle time increases approximately 15 min.

"Intensive Rinse" button

- More water and a longer time in rinse cycle is added.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

"Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programme "Synthetics", "Daily" and "Delicates".
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

Note: The programme stops to "Rinse Hold" at the time the "Rinse Hold" light in the programme flow indication is on.

Terminate the "Rinse Hold" option:

- Press the "Rinse Hold" button again; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob counterclockwise to the "Drain" programme and press the **"Start/Pause"** button again when flashing.

"Spin Speed Reduction" button

- Every programme has an automatic predefined maximum spin speed.
- Press the button to set another spin speed.
- If the spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

START DELAY

The "Start Delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Press the "Start Delay" button to select the delay time by 1 to 23 hours;
- Press the **"Start/Pause"** button.
- The time delay indication disappears when the programme starts and it is replaced by the remaining time.
- The number of hours preselected can later be reduced pressing again the "Start Delay" button.

To cancel the "Start Delay".

- Turn the programme selector to the "0" position.
- Reselect the desired programme and options and press the **"Start/Pause"** button.

PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The pilot lamp of the **"Start/Pause"** button lights up.

The indicator lamps show the sequence reached in the programme. After starting the programme, the sequence indication runs from left to right through Wash, Rinse, Spin.

When the sequence of the programme is finished the corresponding lamp goes out.

DOOR LOCK

The door can be opened when the "Door Open" indication is on.

PROGRAMME END

- The remaining time is on "0:00" and all the lights of the programme sequence indication are off.
1. Turn the programme selector to the "0" position.
 2. Turn the water supply tap off.
 3. Open the door and unload the machine.
 4. Close the tap and leave the door ajar to allow the drum to dry out.

CHANGE THE PROGRAMME, OPTIONS AFTER PROGRAMME START

1. Press the **"Start/Pause"** button to pause the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL A PROGRAMME BEFORE THE END

1. Press the **"Start/Pause"** button to pause the programme. The light flashes.
2. Set the programme selector to "Drain". The spin indicators show "0" and the remaining time shows "0:02".
3. Press the **"Start/Pause"** button to start the drain programme.